 


24"x 36"W McKenzie Alder Bookcases: 29"- 48"H

Finished Program

 
Assembly Instructions

24" Wide

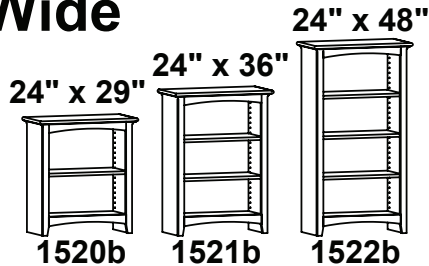


Model # 1520b 1521b 1522b

30" Wide

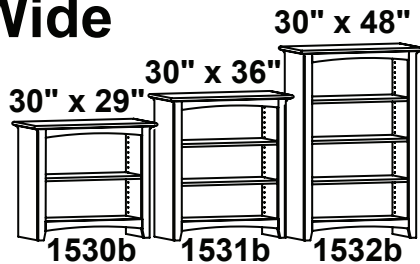

Model # 1530b 1531b 1532b

 36" Wide

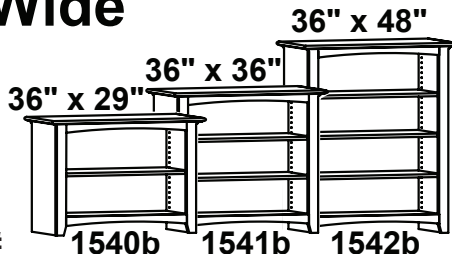

Model # 1540b 1541b 1542b

IMPORTANT NOTES:

- This assembly requires two people.
- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the shelves.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture.
- Tighten or repair as needed.

! WARNING

Children have died from furniture tipover. To reduce the risk of furniture tip over:

- ALWAYS install tipover restraint if provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on doors, or shelves.
- Place heaviest items in the bottom shelves.

Use of tipover restraints may only reduce, not eliminate, the risk of tipover.

Attention: If you would like a tipping restraint kit Whittier will provide one free of charge. Please contact our Customer Service Department.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213

Fax: 541-687-2060 • Email: info@whittierwood.com

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:

McKenzie Alder Bookcase Program — Parts List

Before you begin to assemble this unit, identify each part and make sure the quantities received match what is on this list.

If you need to replace a part, please refer to the following list for the finish, part name and letter code.

Bookcase Finish

Please note the finish of the bookcase for replacement part orders.

Bookcase finish options are subject to change.

Stain



Glazed
Antique
Cherry



Caffè



Fieldstone



Hazelnut



Natural
Alder

Paint



Snowbound
SW 7004



Aged White
SW 9180



Silverplate
SW 7649



Tricorn Black
SW 6258

Two-Tone



Snowbound
SW 7004
Natural Alder












Aged White
SW 9180
Natural Alder



Silverplate
SW 7649
Natural Alder



Tricorn Black
SW 6258
Natural Alder


Part	Description	Quantity (by Model #)								
		1520b	1530b	1540b	1521b	1531b	1541b	1522b	1532b	1542b
A	Adjustable Shelf 	1	2	3	1	2	3	1	2	3
B	Shelf Bracket 	4	8	12	4	8	12	4	8	12
C	#6 x 1/2" Undercut Screw 	4	8	12	4	8	12	4	8	12
D	Top Assembly (attached) 	1								
G	#8 x 1" Pan Head Screw (inserted) 	8	8	10	8	8	10	8	8	10
H	Nylon Insert (inserted) 	4								
J	#8 x 1-1/4" Pan Head Screw (installed) 	13								
U	Slotted Leveler (inserted) 	4								
Ua	Leveler Adjustment Tool (attached to Owner's Manual) 	1								

McKenzie Alder Bookcase Program

Assembly Instructions

Tools Required: Phillips Screwdriver, Rubber Mallet or Padded Hammer

 Tools Provided: Leveler Adjustment Key in the Zip bag taped to the Owner's Manual and Safety Guide.

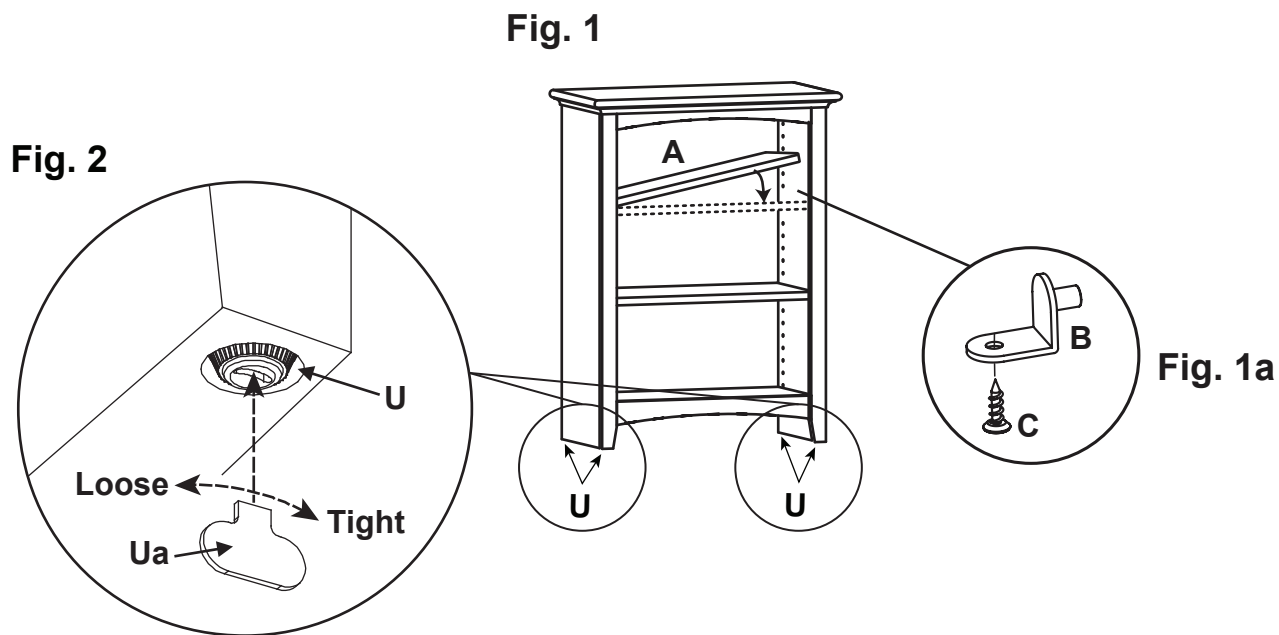

TO MOVE THE ADJUSTABLE SHELVES:

1. Determine where you want to place the Adjustable Shelves (A). Remove the #6 x 1/2" Undercut Screws (C) from the underside of the shelf and take out the Shelf and Shelf Brackets (B). Insert the Shelf Brackets (flat side down) into the four different holes and insert the shelf. See Figure 1. You may secure them by inserting #6 x 1/2" Undercut Screws (C). See Fig. 1a.
2. Place the unit at its final destination. Use the Leveler Adjustment Key (Ua), found in the Zip bag taped to the Owner's Manual and Safety Guide to rotate the Slotted Levelers (U) on the bottoms of the legs until the unit is level. See figures 1 and 2.

