Model #

1317AFGAC McKenzie Queen Platform Storage Bed

Assembly Instructions



Congratulations!

This fine piece of furniture will make a handsome addition to your home. For the best results, start by reading the Assembly Instructions **before** you begin your project.

For normal household use only. *NOT* recommended for commercial use.

Unload items from this unit prior to moving. Before loading or moving this unit, check all screws and supports for tightness.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.



Service Policy: We will replace parts which are defective, missing or damaged. Please contact Whittier Wood Products customer service department directly (by phone, fax, mail or E-mail) for replacement parts.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). A message can be left 24 hours a day, 7 days a week.

To Order: Provide the complete furniture model number, part letter, production code, quantity needed, reason for replacement and your full name and address along with a telephone number in case we need to contact you.

Parts ship from our Eugene, Oregon factory within 1 or 2 business days from the time we receive the request. Please allow 5-10 business days for delivery.

800-653-3336

Outside U.S. or Canada: 541- 687- 0213 Fax: 541-687-2060 • www.whittierwood.com Mail: P.O. Box 2827 • Eugene, Oregon 97402, U.S.A

IMPORTANT NOTES:


- Store the item: 1) in the box; 2) in a dry place; 3) in temperatures ranging from 40° to 90°. (Not on a cold, possibly damp, cement floor.)
- Inspect your furniture periodically for any loose glue joints or screws, or any other problem which may be affecting the stability of your furniture. Tighten or repair as needed.
- This Assembly requires two people.



P.O. Box 2827 Eugene, OR 97402 USA Production Code:

1317AFGAC McKenzie Queen Platform Storage Bed — Parts List


Before beginning assembly, check that the quantities of parts received match those listed below. To replace a part, please refer to the following list for its name and letter.

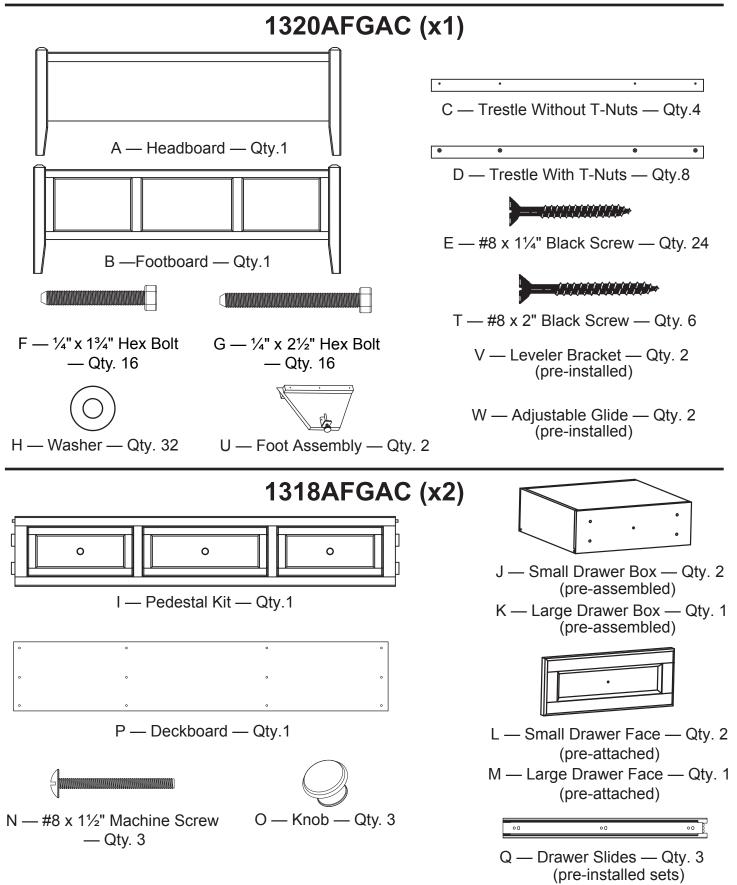


1317AFGAC McKenzie Queen Platform Storage Bed Assembly Instructions

This Assembly Requires Two People TOOLS REQUIRED:


Phillips screwdriver, 7/16" wrench and tape measure.

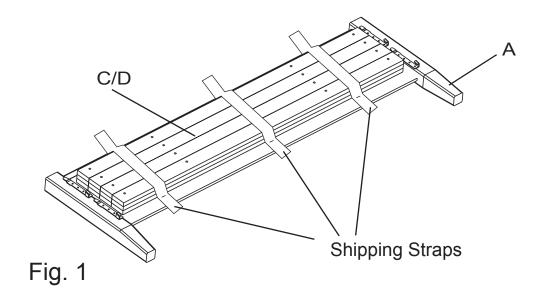


1. Remove the Trestles (C/D) from the back of the Headboard (A) as seen in Fig. 1 and place them off to the side.

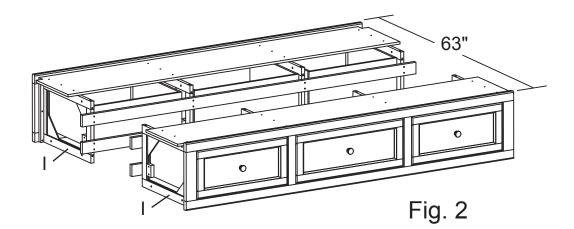

2. Place both Pedestals (I) approximately 63" apart as shown in Fig. 2.

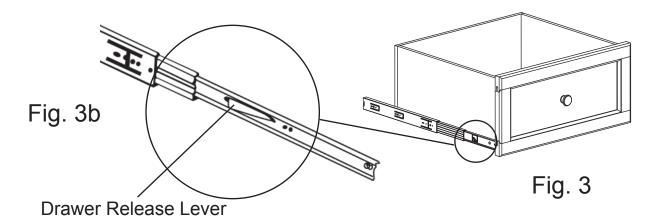



3. Remove Drawers (J & K) from Pedestal Kits (I). To remove drawers, push up on the left side of the Drawer Release Lever while pushing down on the right Drawer Release Lever (see Fig. 3b). Note where each drawer came from to ensure correct re-installation. (Positions are marked on drawer backs.)

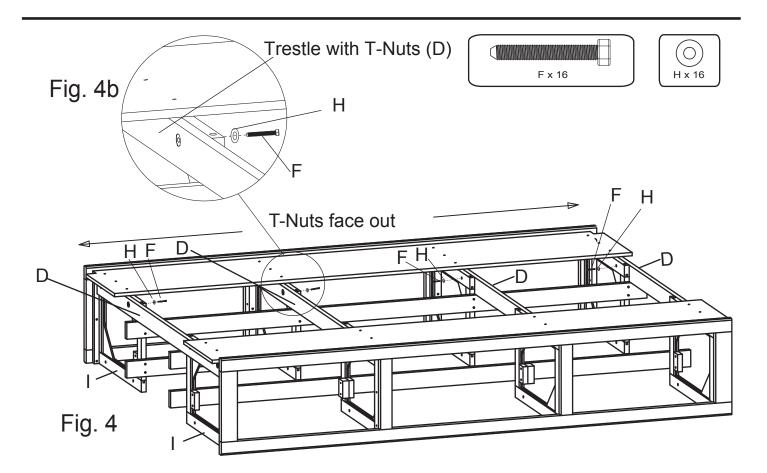


NOTE: DO NOT TIGHTEN BOLTS UNTIL FINAL ASSEMBLY IN STEP 10 IS COMPLETED.

 Place 4 Trestles with T-Nuts (D) between Pedestals (I) and insert 1³/₄" bolt (F) and washer (H) as shown in Fig. 4b. When installing Trestles (D), make sure the T-Nuts face out as shown in Fig. 4. 5. Rotate Pedestal Assembly upside down so that the plywood Deckboards are on the floor.

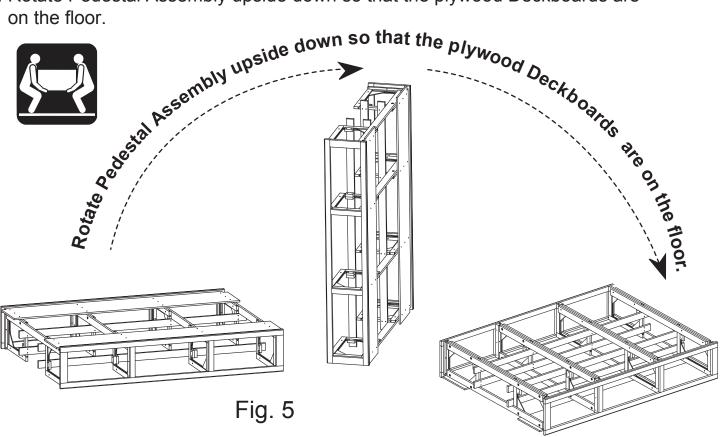


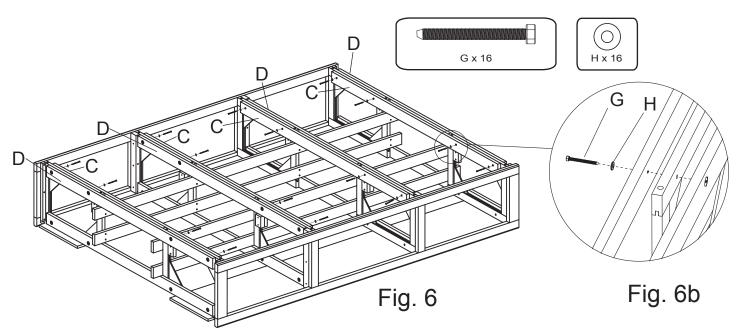


6. Place the remaining Trestles (C and D) on the Pedestal Assembly. Face the Trestles with T-Nuts (D) toward the ends of the Assembly from the center as shown in Fig 6. Insert 21/2" Hex Bolt (G) and Washer (H). See Fig. 6b. DO NOT TIGHTEN BOLTS **UNTIL FINAL ASSEMBLY IN STEP 10.**

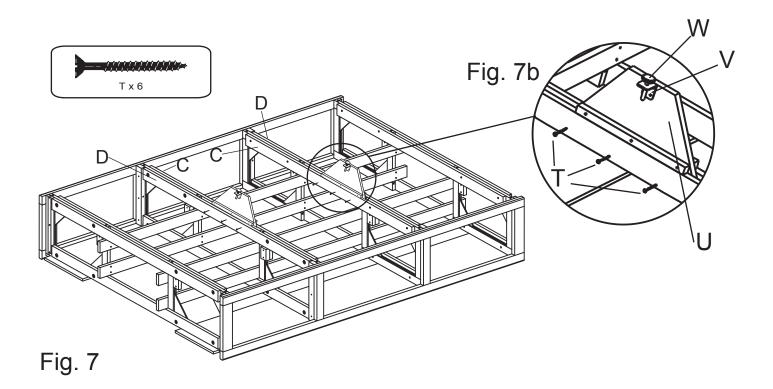


- On each inner Pair of Trestles (C & D), place a Foot Assembly (U) between the two middle trestles as shown in Fig. 7. Insert three #8 X 2" Black screws (T) as shown in Fig. 7b.
- 8. Rotate Pedestal Assembly to its original position.

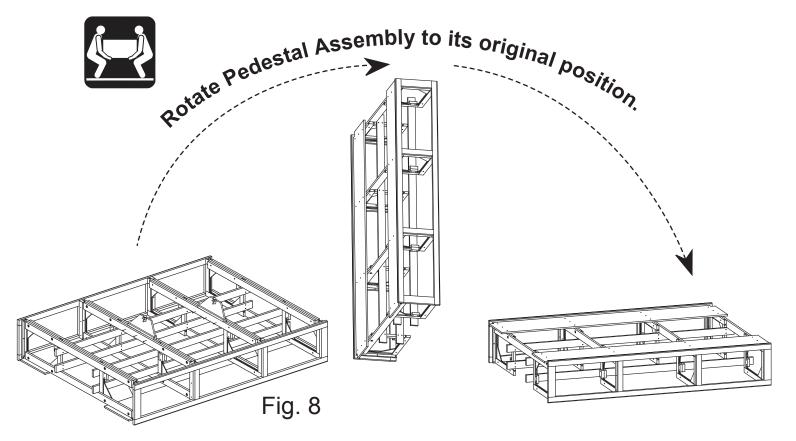


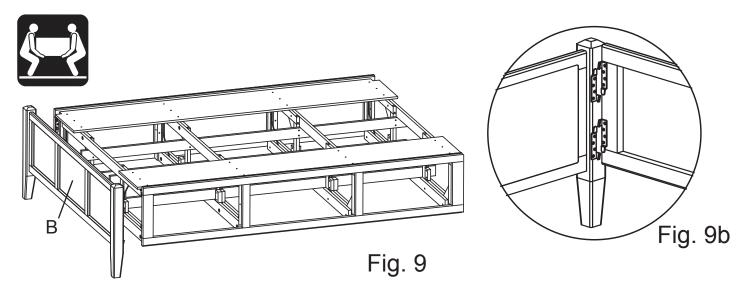


9. Attach the Footboard (B) to the Pedestal Assembly as in Fig. 9. Align brackets as shown in Fig. 9b, and slide the Pedestal Assembly down on to the Footboard (B).

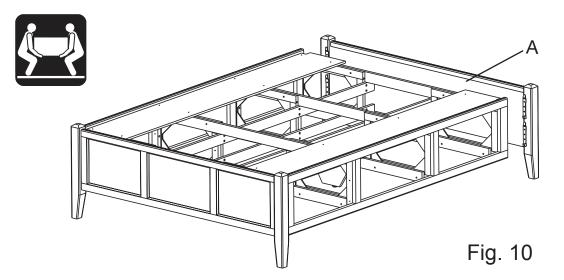

10. Attach Headboard (A) to Pedestal Assembly as in previous step. *NOTE: NOW TIGHTEN ALL BOLTS ON TRESTLES.*

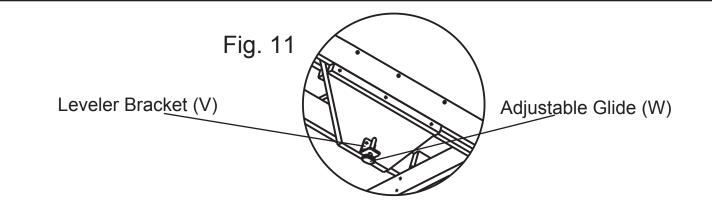

11. Adjust Glides (W) on the Foot Assemblies (U) so the Glides just touch the floor.

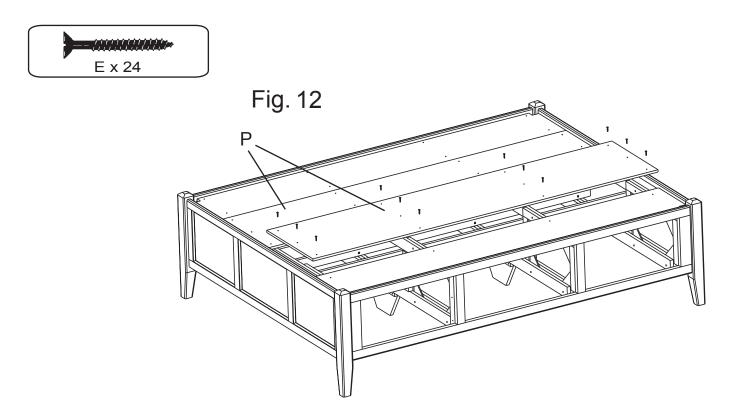

- 12. Place Deckboards (P) as shown in Fig. 12. There should be a small gap between each deckboard. Secure with #8x1¹/₄" Screw (E).
- 13. Carefully align drawer slides into the cabinet and gently push the drawers back to their original positions. Sleep well, and enjoy!