Model #

5197AFGMS Ambierle

Chairside Table

Glazed Millstone finish

Assembly Instructions



IMPORTANT NOTES:

- For normal household use only. Not recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the drawer.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.

WARNING

Notice to California Customers

California Prop 65 requires consumer goods to be labeled if any one of 850+ different chemicals or substances, including wood dust, is present even in trace amounts. Drilling, sawing, sanding or machining wood products generates wood dust, a substance known to the State of California to cause cancer. Warning: This product contains a chemical or substance known to the State of California to cause cancer, birth defects or other reproductive harm. California Health and Safety Code Section 25249.6

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

CALL US FIRST! Do not return this item to the store

Service Policy: We will replace any part that is defective, missing or damaged during assembly. For a replacement part, directly contact Whittier Wood Products customer service department by phone, fax, mail or email.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

To Order: Provide the finish and furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060 www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.



Production Code: 03/14

5197AFGMS Ambierle Chairside Table

Parts List

Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the following letter and part name.


Part	Description		Quantity
A	Case Assembly		1
, ,	- Case Alasemany		
В	Leg		4
С	Drawer Box (inserted)		1
D	Drawer Face (installed)		1
E	Drawer Slide (pre-installed set)	90 90 90	1
F	#6 x 3/4" Philtruss Screw (inserted)		6
G	#6 x 1/2" Philtruss Screw (inserted)	(2)	6
Н	#8 x 1-3/8" Lo-Profile Screw (inserted)	accececece	8
1	#8 x 1-1/4" Pan Head Screw (inserted)	(x))))))))))))))))))))))))))))))))))))	42
J	#8 x 7/8" Black Lo-Profile Screw (inserted)	ececece()	4
K	3/8" x 1" Insert Nut (inserted)		8
L	1/4" x 20mm Insert Nut (inserted)		4
М	Adjustable Glide (installed)		4
N	Knob (attached)		1
0	#8 x 1-1/4" Machine Screw (installed)		1
Р	5/16" Flat Washer		8
Q	3/8" x 2-1/2" Hex Bolt		8

5197AFGMS Ambierle Chairside Table


Assembly Instructions

Tools Required: Phillips Screwdriver, 9/16" or Adjustable Wrench

1. Remove the Drawer (C) from the Case Assembly (A). To remove the drawer, pull up on the left side of the Drawer Release Lever while pushing down on the right Drawer Release Lever. See Figure 1a.

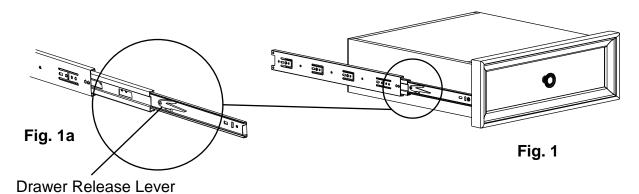


2. Turn the unit upside down on a clean, protected surface. Place two Legs (B) at the front corners of the Case Assembly (A) making sure the drilled corners of the legs face toward the Corner Blocks. Insert two 3/8" x 2-1/2" Hex Bolts (Q) with two Flat Washers (P) through the Corner Blocks and into the leg and fasten securely. See Figures 2 and 2a. Repeat for the other two legs.

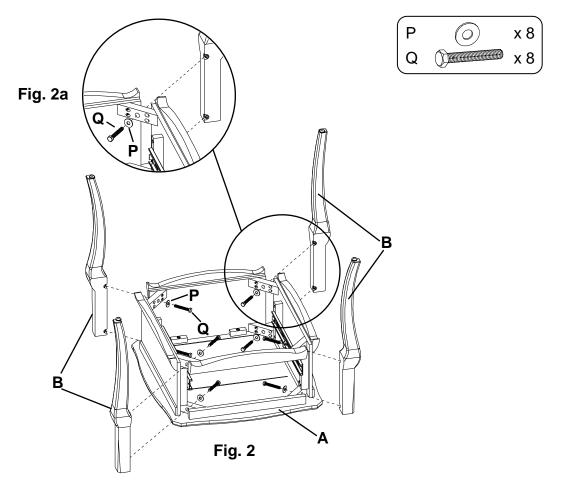

5197AFGMS Ambierle Chairside Table

Assembly Instructions

3. Turn the table upright and insert the Drawer (C).

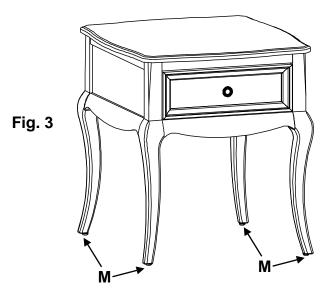

4. Place the table at its final destination. To level the table, rotate the Adjustable Glide (M) found at the bottom of each leg assembly. See Figure 3.